

DLP®プロジェクター RICOH PJ WX4130N/WX4130

シリアルコマンド資料



目次

■ コマンドの構成	1
■ コマンドリスト	2

本機はサービス用USB mini-BポートとPCをUSB接続することにより、PCからRS-232Cコマンド制御をすることが可能です。

ご使用の際は、PCにUSB to RS232変換アダプターコントローラー用ドライバーをインストールする必要があります。詳しくはサービス実施店にお問い合わせください。

●Format

<Command format>

Header: '#'
 Delimiter: CR (0x0Dh)
 Command: 3Byte (ASCII Character)
 Parameter: Variable length
 (If the command has a parameter, place a colon before the parameter.)

<Response format>

Header: '-'
 Delimiter: CR (0x0Dh)
 Command: 3Byte (ASCII Character, command echo)
 Parameter: Variable length
 (If the command has a parameter, place a colon before the parameter.)

●Details and examples

<Execution Command>

Command
 # X X X CR
 PARAM: None

Example
 Turn on the projector (Success)
 # P O N CR

Response
 - X X X S C ID CR
 ID:Result(ASCII Character)
 0:Default
 Other: Reserved
 - P O N S C 0 CR

<Adjustment command>

Get

X X X CR
 PARAM: None

- X X X PARAM CR
 PARAM: Current value
 The parameter has no '0' in front of actual value.
 If the range of parameter includes negative value, the parameter other than 0 has a sign.
 If the range of parameter does not includes negative value, the parameter has no sign.

Example
 Get the volume (25)
 # V V L CR

- V V L 2 5 CR

Set

X X X PARAM CR

PARAM: [ASCII number] Set the value(+)
 '+' [ASCII number] Set the value(+)
 '-' [ASCII number] Set the value(-)
 T N C Increment the value (+1)
 D E C Decrement the value(-1)
 M A X Maximize the value
 M I N Minimize the value
 T N T initialize the value

- X X X PARAM CR

PARAM: Value after setting
 The parameter has no '0' in front of actual value.
 If the range of parameter includes negative value, the parameter other than 0 has a sign.
 If the range of parameter does not includes negative value, the parameter has no sign.

Example
 Set the Contrast (-3)
 # V C N - 3 CR

- V C N - 3 CR

Increment the Brightness (+3 -> +4)
 # V B R T N C CR

- V B R T N + 4 CR

Initialize the V Keystone (0)
 # P K S T N T CR

- P K S T N 0 CR

<Setting Command>

Get

X X X CR
 PARAM: None

- X X X PARAM CR
 PARAM: Current value (ASCII number. See the conversion table in the command list.)

Example
 Get the language (English = 0)
 # L N G CR

- L N G 0 CR

Set

X X X PARAM CR
 PARAM: [ASCII number] Set the value (See the conversion table.)
 T N T initialize the value

- X X X PARAM CR
 PARAM: The value after setting

Example
 Set the language (Japanese = 10)
 # L N G T 0 CR

- L N G T 1 0 CR

Initialize the projection mode (standard = 0)
 # P J M T N T CR

- P J M T N 0 CR

●Response of Illegal command

<Unsupported command>

Example
 Unknown Command
 # A B C CR
 Unknown Parameter
 # P J M X Y Z CR

- E R ID CR
 ID:Error number(ASCII character)
 0: Default
 Other: Reserved
 - E R 0 CR
 - E R 0 CR

<Command error>

Example
 Decrement the language (Unsupported parameter)
 # L N G D E C CR
 Send the Power Off command when the projector is standby mode.
 # P O F CR

- X X X E R ID CR
 ID:Error number(ASCII character)
 0: Default
 Other: Reserved
 - L N G E R 0 CR
 - P O F E R 0 CR

●Notes

- Numerical parameter has a sign. If it has no sign, the parameter is assumed to positive value.
- Numerical parameter is able to have a '0' in front of a valid value. For instance, parameter "+0012" is the same as "+12".
- Numerical parameter is limited from -2³¹ to (2³¹-1).
- Maximum command length is 128Byte.
- Ignore the BYTE code other than ASCII character.

RICOH Projector PJ WX4130 Series Serial Command List

Function	Command Name	EXE	GET	SET							Command	Response	
				(val)	INC	DE	MA	MIN	INI				
User Command													
Adjustment Group (Following State is "UART 0 Adjustment" with OSD)													
Volume	VVL	X	O	O	O	O	O	O	O	# 'V' 'V' 'L' 'L'	PARAM : 0 to 50 CR	␣ 'V' 'V' 'L' 'L'	PARAM : 0 to 50 CR
Contrast	VCN	X	O	O	O	O	O	O	O	# 'V' 'C' 'N' 'N'	PARAM : -16 to +16 CR	␣ 'V' 'C' 'N' 'N'	PARAM : -16 to +16 CR
Brightness	VBR	X	O	O	O	O	O	O	O	# 'V' 'B' 'R' 'R'	PARAM : -16 to +16 CR	␣ 'V' 'B' 'R' 'R'	PARAM : -16 to +16 CR
Color	VCL	X	O	O	O	O	O	O	O	# 'V' 'C' 'L' 'L'	PARAM : -16 to +16 CR	␣ 'V' 'C' 'L' 'L'	PARAM : -16 to +16 CR
Tint	VTN	X	O	O	O	O	O	O	O	# 'V' 'T' 'N' 'N'	PARAM : -16 to +16 CR	␣ 'V' 'T' 'N' 'N'	PARAM : -16 to +16 CR
Sharpness	VSH	X	O	O	O	O	O	O	O	# 'V' 'S' 'H' 'H'	PARAM : -8 to +8 CR	␣ 'V' 'S' 'H' 'H'	PARAM : -8 to +8 CR
Red Level	VLR	X	O	O	O	O	O	O	O	# 'V' 'L' 'R' 'R'	PARAM : -16 to +16 CR	␣ 'V' 'L' 'R' 'R'	PARAM : -16 to +16 CR
Green Level	VLG	X	O	O	O	O	O	O	O	# 'V' 'L' 'G' 'G'	PARAM : -16 to +16 CR	␣ 'V' 'L' 'G' 'G'	PARAM : -16 to +16 CR
Blue Level	VLB	X	O	O	O	O	O	O	O	# 'V' 'L' 'B' 'B'	PARAM : -16 to +16 CR	␣ 'V' 'L' 'B' 'B'	PARAM : -16 to +16 CR
V Keystone	PKS	X	O	O	O	O	O	O	O	# 'P' 'K' 'S' 'S'	PARAM : -32 to +32 CR	␣ 'P' 'K' 'S' 'S'	PARAM : -32 to +32 CR
Phase	PPH	X	O	O	O	O	O	O	O	# 'P' 'P' 'H' 'H'	PARAM : 0 to 31 CR	␣ 'P' 'P' 'H' 'H'	PARAM : 0 to 31 CR
Frequency	PCK	X	O	O	O	O	O	O	O	# 'P' 'C' 'K' 'K'	PARAM : -64 to +64 CR	␣ 'P' 'C' 'K' 'K'	PARAM : -64 to +64 CR
H Position	PHP	X	O	O	O	O	O	O	O	# 'P' 'H' 'P' 'P'	PARAM : -64 to +64 CR	␣ 'P' 'H' 'P' 'P'	PARAM : -64 to +64 CR
V Position	PVP	X	O	O	O	O	O	O	O	# 'P' 'V' 'P' 'P'	PARAM : -32 to +32 CR	␣ 'P' 'V' 'P' 'P'	PARAM : -32 to +32 CR
Clamp 1 (Position)	PC1	X	O	O	O	O	O	O	O	# 'P' 'C' '1' '1'	PARAM : 0 to 255 CR	␣ 'P' 'C' '1' '1'	PARAM : 0 to 255 CR
Clamp 2 (Width)	PC2	X	O	O	O	O	O	O	O	# 'P' 'C' '2' '2'	PARAM : 0 to 255 CR	␣ 'P' 'C' '2' '2'	PARAM : 0 to 255 CR
Setting Group (Following State is "UART 0 Setting" with OSD)													
Noise Reduction	NRE	X	O	O	X	X	X	X	O	# 'N' 'R' 'E' 'E'	PARAM : 0 to 1 CR	␣ 'N' 'R' 'E' 'E'	PARAM : 0 to 1 CR
Noise Reduction Off = 0										# 'N' 'R' 'E' 'E'	'0' CR	␣ 'N' 'R' 'E' 'E'	'0' CR
Noise Reduction On = 1										# 'N' 'R' 'E' 'E'	'1' CR	␣ 'N' 'R' 'E' 'E'	'1' CR
Picture Mode	PIC	X	O	O	X	X	X	X	O	# 'P' 'I' 'C' 'C'	PARAM : 0 to 2 CR	␣ 'P' 'I' 'C' 'C'	PARAM : 0 to 2 CR
PictureMode 1(Bright) = 0										# 'P' 'I' 'C' 'C'	'0' CR	␣ 'P' 'I' 'C' 'C'	'0' CR
PictureMode 2(Standard) = 1										# 'P' 'I' 'C' 'C'	'1' CR	␣ 'P' 'I' 'C' 'C'	'1' CR
PictureMode 3(Natural) = 2										# 'P' 'I' 'C' 'C'	'2' CR	␣ 'P' 'I' 'C' 'C'	'2' CR
RGB Input Range	RRI	X	O	O	X	X	X	X	O	# 'R' 'R' 'I' 'I'	PARAM : 0 to 1 CR	␣ 'R' 'R' 'I' 'I'	PARAM : 0 to 1 CR
Standard = 0										# 'R' 'R' 'I' 'I'	'0' CR	␣ 'R' 'R' 'I' 'I'	'0' CR
Full = 1										# 'R' 'R' 'I' 'I'	'1' CR	␣ 'R' 'R' 'I' 'I'	'1' CR
Equalizer	EQZ	X	O	O	X	X	X	X	O	# 'E' 'Q' 'Z' 'Z'	PARAM : 0 to 1 CR	␣ 'E' 'Q' 'Z' 'Z'	PARAM : 0 to 1 CR
Low = 0										# 'E' 'Q' 'Z' 'Z'	'0' CR	␣ 'E' 'Q' 'Z' 'Z'	'0' CR
High = 1										# 'E' 'Q' 'Z' 'Z'	'1' CR	␣ 'E' 'Q' 'Z' 'Z'	'1' CR
Screen Size	SCS	X	O	O	X	X	X	X	O	# 'S' 'C' 'S' 'S'	PARAM : 0 to 4 CR	␣ 'S' 'C' 'S' 'S'	PARAM : 0 to 4 CR
Screen Size(Normal) = 0										# 'S' 'C' 'S' 'S'	'0' CR	␣ 'S' 'C' 'S' 'S'	'0' CR
Screen Size(16:9) = 1										# 'S' 'C' 'S' 'S'	'1' CR	␣ 'S' 'C' 'S' 'S'	'1' CR
Screen Size(Full) = 2										# 'S' 'C' 'S' 'S'	'2' CR	␣ 'S' 'C' 'S' 'S'	'2' CR
Screen Size(Native) = 3										# 'S' 'C' 'S' 'S'	'3' CR	␣ 'S' 'C' 'S' 'S'	'3' CR
Screen Size(Zoom) = 4										# 'S' 'C' 'S' 'S'	'4' CR	␣ 'S' 'C' 'S' 'S'	'4' CR
Language	LNG	X	O	O	X	X	X	X	X	# 'L' 'N' 'G' 'G'	PARAM : 0 to 24 CR	␣ 'L' 'N' 'G' 'G'	PARAM : 0 to 24 CR
English = 0										# 'L' 'N' 'G' 'G'	'0' CR	␣ 'L' 'N' 'G' 'G'	'0' CR
Japanese = 1										# 'L' 'N' 'G' 'G'	'1' CR	␣ 'L' 'N' 'G' 'G'	'1' CR
Spanish = 2										# 'L' 'N' 'G' 'G'	'2' CR	␣ 'L' 'N' 'G' 'G'	'2' CR
Russian = 3										# 'L' 'N' 'G' 'G'	'3' CR	␣ 'L' 'N' 'G' 'G'	'3' CR
French = 4										# 'L' 'N' 'G' 'G'	'4' CR	␣ 'L' 'N' 'G' 'G'	'4' CR
Portuguese = 5										# 'L' 'N' 'G' 'G'	'5' CR	␣ 'L' 'N' 'G' 'G'	'5' CR
German = 6										# 'L' 'N' 'G' 'G'	'6' CR	␣ 'L' 'N' 'G' 'G'	'6' CR
Italian = 7										# 'L' 'N' 'G' 'G'	'7' CR	␣ 'L' 'N' 'G' 'G'	'7' CR
Dutch = 8										# 'L' 'N' 'G' 'G'	'8' CR	␣ 'L' 'N' 'G' 'G'	'8' CR
Polish = 9										# 'L' 'N' 'G' 'G'	'9' CR	␣ 'L' 'N' 'G' 'G'	'9' CR
Czech = 10										# 'L' 'N' 'G' 'G'	'10' CR	␣ 'L' 'N' 'G' 'G'	'10' CR
Swedish = 11										# 'L' 'N' 'G' 'G'	'11' CR	␣ 'L' 'N' 'G' 'G'	'11' CR
Finnish = 12										# 'L' 'N' 'G' 'G'	'12' CR	␣ 'L' 'N' 'G' 'G'	'12' CR
Hungarian = 13										# 'L' 'N' 'G' 'G'	'13' CR	␣ 'L' 'N' 'G' 'G'	'13' CR
Norwegian = 14										# 'L' 'N' 'G' 'G'	'14' CR	␣ 'L' 'N' 'G' 'G'	'14' CR
Danish = 15										# 'L' 'N' 'G' 'G'	'15' CR	␣ 'L' 'N' 'G' 'G'	'15' CR
Chinese T = 16										# 'L' 'N' 'G' 'G'	'16' CR	␣ 'L' 'N' 'G' 'G'	'16' CR
Chinese S = 17										# 'L' 'N' 'G' 'G'	'17' CR	␣ 'L' 'N' 'G' 'G'	'17' CR
Background	BGC	X	O	O	X	X	X	X	O	# 'B' 'G' 'C' 'C'	PARAM : 0 to 2 CR	␣ 'B' 'G' 'C' 'C'	PARAM : 0 to 2 CR
Logo = 0										# 'B' 'G' 'C' 'C'	'0' CR	␣ 'B' 'G' 'C' 'C'	'0' CR
Blue = 1										# 'B' 'G' 'C' 'C'	'1' CR	␣ 'B' 'G' 'C' 'C'	'1' CR
Black = 2										# 'B' 'G' 'C' 'C'	'2' CR	␣ 'B' 'G' 'C' 'C'	'2' CR
Startup Screen	SUS	X	O	O	X	X	X	X	O	# 'S' 'U' 'S' 'S'	PARAM : 0 to 1 CR	␣ 'S' 'U' 'S' 'S'	PARAM : 0 to 1 CR
Off = 0										# 'S' 'U' 'S' 'S'	'0' CR	␣ 'S' 'U' 'S' 'S'	'0' CR
On = 1										# 'S' 'U' 'S' 'S'	'1' CR	␣ 'S' 'U' 'S' 'S'	'1' CR
Icon	ICN	X	O	O	X	X	X	X	O	# 'I' 'C' 'N' 'N'	PARAM : 0 to 1 CR	␣ 'I' 'C' 'N' 'N'	PARAM : 0 to 1 CR
Off = 0										# 'I' 'C' 'N' 'N'	'0' CR	␣ 'I' 'C' 'N' 'N'	'0' CR

